

# Manual

## Notice



Read this assembly manual carefully, and verify that you have all the parts listed before you begin. Keep your assembly manual for future reference.



Move this stand gently with 2 persons.



Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.



Do not place very hot/cold objects on top of any surface. Always use a coaster or mat. Never leave liquids on the surface: Clean immediately with a mild soap and a damp cloth. Never use scouring powder based cleanser. Don't touch the glass surface with a hard/acute object it may cause the glass to shatter.



**DO NOT ASSUME CHILD SAFETY WITH ANY PIECE OF FURNITURE!**

Do not allow children to climb on furniture. Improper use can cause death or serious injury. If you are placing a TV on top use safety straps on your TV to prevent the risk of a toppling television. Furniture straps fastened to a wall can also be used to help ensure safety.

Damaged parts or furniture put together incorrectly can lead to serious injuries. Make sure to follow instructions correctly.

## Parts list

① 1x1  Top MDF	② 2x1  Bottom MDF	③ 3x1  Door MDF	④ 4x1  Middle MDF	⑤ 5x1  Left MDF	⑥ 6x1  Right MDF	⑦ 7x1  Screw 7x1	⑧ 8x1  Screw 8x1	⑨ 9x1  Screw 9x1	⑩ 10x2  Screw 10x2
⑪ 11x2  Screw 11x2	⑫ 12x1  Screw 12x1	⑬ 13x2  Screw 13x2	⑭ 14x2  Screw 14x2						
A  A <sub>1</sub> X12	B  B <sub>1</sub> X14	C  C <sub>1</sub> X2	D  D <sub>1</sub> X4	E  E <sub>1</sub> X2					
F  F <sub>1</sub> X1	G  G <sub>1</sub> X4	H  H <sub>1</sub> X4	I  I <sub>1</sub> X1	S Screws for TV					
F <sub>2</sub> X1  F <sub>2</sub> X1	G <sub>2</sub> X4  G <sub>2</sub> X4	H <sub>2</sub> X4  H <sub>2</sub> X4	I <sub>2</sub> X1  I <sub>2</sub> X1	Tools Required(Not included)					
F <sub>3</sub> X1  F <sub>3</sub> X1	G <sub>3</sub> X4  G <sub>3</sub> X4	H <sub>3</sub> X4  H <sub>3</sub> X4							

Model No.:  
**MAT8800**

